

AutoCrib Training – Tutorial Series

This document is a walk through setup of Symantec's pcAnywhere host configuration. It will guide you through the process of setting up pcAnywhere and enabling the host capabilities of AutoCrib's Management Station for remote control and administration.

AutoCrib Inc
Technical Support Group

3011 S Croddy Way • Santa Ana CA. • 92704 • Phone: (714) 274-0400 • Fax: (714) 274-0399 • Email: support@autocrib.com

pcAnywhere Host Configuration: Connection Wizard

1. Open pcAnywhere
2. In Basic View – Click **Host**

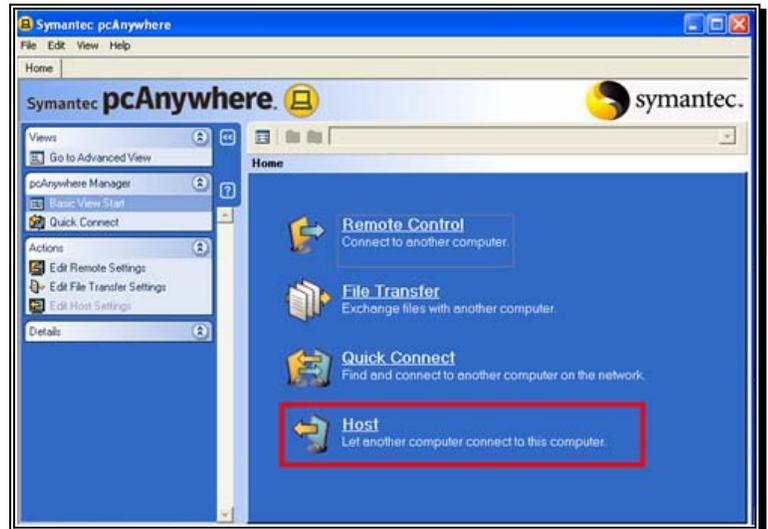


Figure 1

3. Select appropriate connection
 - a. Cable/DSL/LAN – High Speed
 - b. Telephone model – Low Speed
4. Click Next



Figure 2

Continue...

5. Confirm selection
 - Wait for someone to call me**
6. Click Next



Figure 3

7. Chose selection
 - Wait for someone to call me**
8. Click Next



Figure 4

9. Create User Name & Password
10. Click Next



Figure 5

Continue...

- 11. Create Name for Host Connection
- 12. Click Next

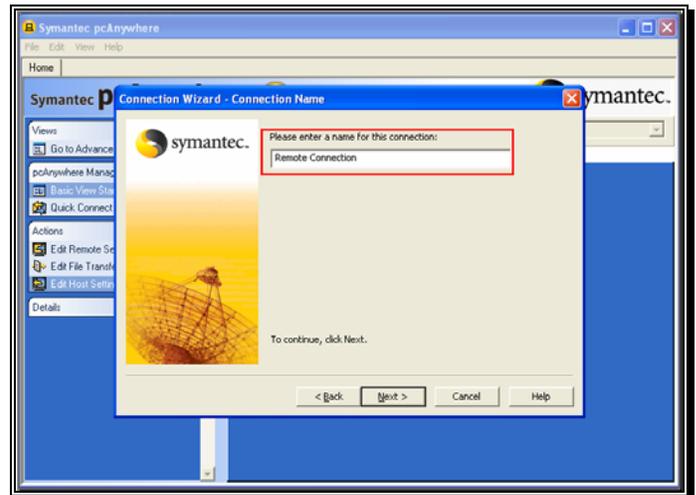


Figure 6

- 13. Confirm Checkbox selection
 ✓ Wait for connection after Wizard
- 14. Click Finish

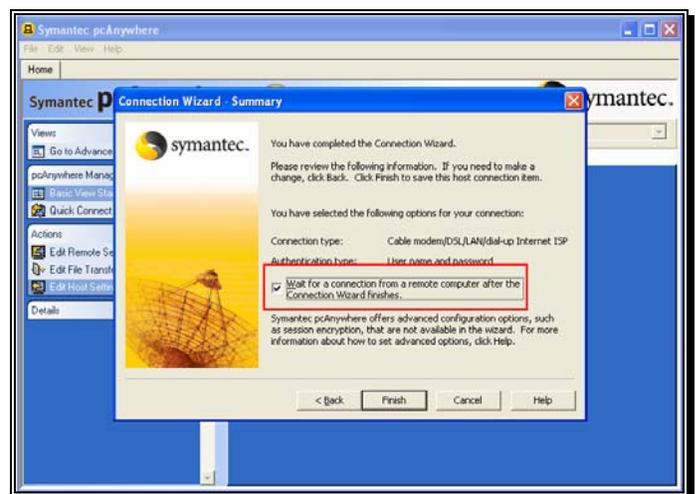


Figure 7

- 15. Host Connection Active
- 16. Verify Checked Blue monitor is system tray



Figure 8