ATR Card View Best Practices

This document outlines the details and use of the Card View Options packaged with ATR versions 11.0.21204.15 and later.

1.1 Overview

With the 11.0.21204.15 release of ATR, CribMaster has introduced a new Card View layout and options that will allow customers the ability to customize the cards.

The same the same lines in the same of the same in		Stated to be a second	
	and a set of the set o		Canal Section
issue Mode			
Geywords			-90
			Cyan Cyan
	4		- W
		× .	Control Sector
hTAMEIY his Curved Claw Fiberglass Halling Hamme/Desc -2] Comments: Darable used construction		20 - Onsaka Away Pinn Starky Banky Pohot 1990 7 Connecit: Gover Joint Johns Monthly adjust Indexes Jar positions	dent films Original fil foreg
			B Page Dawn
10000008 TEST GAUGE Test Gauge for pressure check This is a gas fort gauge assembly. It is 30 PSI, It has a This is a gas fort gauge assembly. It is 30 PSI, It has a	Gyr 4 Ironn air volen.	10002 C Door Holes Cospec Creek Door Keeling (Dean - 2) Consenses:: Phylodiel (Frans Half Keeling Risse Consenses:: Phylodiel (Frans Half Keeling Risse	Pyr 6

Card View Layout on Issue Screen

Expanded Card View – Users will have the ability to click the expand icon on the top right corner of the card and view details of the item.



Expanded Card View

PMA.TPB.161a

CRIBMASTER



Card View Options

Options	
Crib(s)/Machine(s) Default Options Crib 102-Point Of Use Options	
ImageCaptureInterval	493
ImageStorageLimit	700
Card View Fields	
CardimageSize	75% of card (Default)
CardLine1Field1	Manufacturer
CardLine1Field2	Qty 2
CardLine2	CardLine1Field2
CardLine3	None
CardLine4	bem
NumberOfCards	Bin
Cost Centers Screen	• Oty •
CostCentersFirst	Description1
HideUser1	Description2
HideUser2	Comments
HideUser3	BinComments
HideUser4	AtDescription
HideUser5	AtBinDescription 🐨
HideUser6	
LockDefaultUDFs	False
Formatting	

Card View Options Screen

Option	Details
CardImageSize	Determines the size off the image on the card. This setting will determine how many lines of data are visible on the card. (Default = 75%)
CardLine1Field1	This setting allows the user to choose the first data field that will be displayed on the top data line of the card. This line will always be visible no matter the image size. (Default = Item Number)
CardLine1Field2	This setting allows the user to choose the second data field that will be displayed on the top line of the card. This line will always be visible no matter the image size. (Default = QTY)
CardLine2	This setting allows users to choose the data that will be displayed on the second line (underneath CardLine1) of the card. This line dis- playing will be dependent on the CardImageSize setting and the NumberOfCards setting (Default = Description 1)
CardLine3	This setting allows users to choose the data that will be displayed on the third line of the card. This line displaying will be dependent on the CardImageSize setting and the NumberOfCards setting. (Default = Comments
CardLine4	This setting allows users to choose the data that will be displayed on the fourth line of the card. This line displaying will be dependent on the CardImageSize setting and the NumberOfCards setting. (Default = Description 2)
NumberOfCards	This setting allows the user to choose the number of cards that will display on the screen at a given time. The size of the cards will change depending on the value selected.



1.2 Best Use Practices

Note: After upgrading to ATR version 11.0.21204.15, the new Card View options and layout will be automatically applied. The default values for each text line and Image size will be applied. To ensure that the cards will contain the desired information, CribMaster recommends that users update the options via the centralized ATR Options in CribMaster Client either per Site or per Crib.

- 1. Update CribMaster Client and the CribMaster Web Service (if applicable) to version 11.0.21204.10.
- Login to CribMaster and if using ATR Options templates, navigate to System Options > ATR Option Templates. On this screen, the user can update any current templates being used or they can create a new template that can be applied to either a site or a crib. The new Card View Fields will appear in the template.

ROp	tion Template				
Option	Template				
te ID:	: 🔞				
tion:					
nts:					
ove	from active list				
ame		Value	Override	Locked	
	AllowReceive	True			
	AllowReissues	False			
	AlowReturns	True		0	
	AllowSetupMode	True			
	AlowToolbags	False	0	0	
	AllowTransHistory	True	0		
	DefaultEmployee		0		
	DownloadInterval	3600			
	DownloadLinkedFiles	True		0	
	NotfyOnLicenseExpiry	True			
	ReceiveByPO	True		0	
	RestrictColumnLayout	False			
	SyncOnlyMode	False	0		
	UploadInterval	60			
	WebServiceUrl			0	
٣	Category: Camera				
	CaptureImages	False		0	
	ImageCaptureInterval	500		0	
	Inspectanopaliest	1000	0	-	
٣	Category: Card View Fie	lds			
	CardImageSize	75% of card (Default)		0	
	CardLine 1Field 1	Item	0		
	CardLine 1Field2	Qty			
	CardLine2	Description1		0	
	CardLine3	Comments	0		
	CardLine4	Description2	0		
	NumberOfCards	0 (Let ATR Decide)			
	ShowBinComments	False			

Card View Fields Template



- 3. After creating/updating the templates or if templates are not being used, navigate to the Site Properties (if using site filtering) or the Crib Properties and open the ATR Options tab.
- 4. Here, users can apply the new template or directly set the options for every ATR at a site (if using site filtering) or for an individual crib.

- Informa	ation User Defined Field	Configuration ATR Options Ba	r Code Mapping				
olate ID	(none)			• X Show all options			
Name		Value	Override	Locked			
	SyncOnlyMode	False					
	UploadInterval	60					
	WebServiceUrl						
Ŧ	Category: Camera						
	CaptureImages	False					
	ImageCaptureInterval	500					
	ImageStorageLimit	1000					
T	▼ Category: Card View Fields						
	CardImageSize	75% of card (Default)					
	CardLine 1Field 1	Item					
	CardLine 1Field2	Qty					
	CardLine2	Description 1					
	CardLine3	Comments					
	CardLine4	Description2					
	NumberOfCards	0 (Let ATR Decide)					
	ShowBinComments	False					

Card View Fields in ATR Options - Site

o Inform	ation Advanced Trans	actions Links Audit Cycle Cour	ting P.O. History	ATR O	ptions Crib Access	
late ID	(none)			• ×	Show all options	
Name		Value	Override	l	ocked	
	AllowReceive	False	1			
	AllowReissues	True	2			
	AllowReturns	True				
	AllowSetupMode	True				
	AllowToolbags	False				
	AllowTransHistory	False	2			
	DefaultEmployee	JOE	V			
	DownloadInterval	7200	V			
	DownloadLinkedFiles	True				
	NotifyOnLicenseExpiry	True				
	ReceiveByPO	True				
	RestrictColumnLayout	True	1			
	SyncOnlyMode	False				
	UploadInterval	60				
	WebServiceUrl	HTTP://MRT-PA-DB-00:8080/C	V			
Ŧ	Category: Camera					
	CaptureImages	False				
	ImageCaptureInterval	493	2			
_	ImageStorageLimit	700	1	_	0	
Ŧ	♥ Category: Card View Fields					
	CardImageSize	75% of card (Default)				
	CardLine 1Field 1	Item				
	CardLine 1Field2	Qty				
	CardLine2	Description 1				
	CardLine3	Comments				
	CardLine4	Description2				
	NumberOfCards	0 (Let ATR Decide)				
	ShowBinComments	False				
Ŧ	Category: Cost Centers S	reen				
	CostCentersFirst	True	1			

Card View Fields in ATR Options - Crib



- 5. After setting the options, save the changes and when ATR syncs next, it will update the Card View options locally at the machine.
- 6. User can also locally update the options at the ATR by navigating to Default Options in the Admin section of the software.